


Exploded View

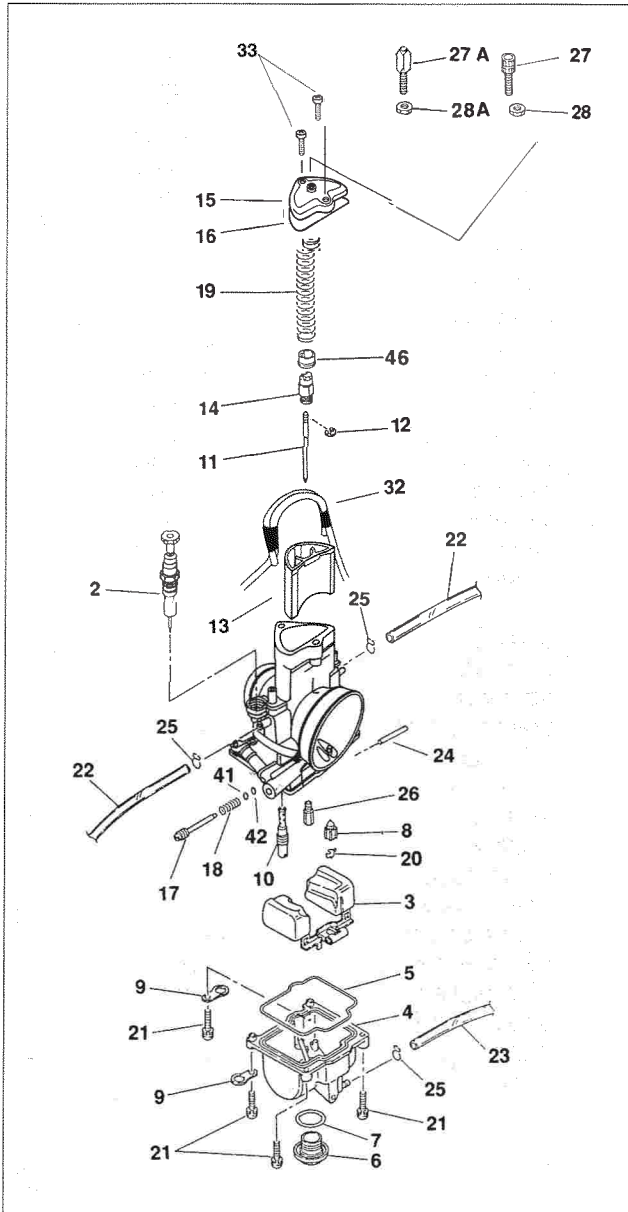

PWM Carb. Parts List

NO.	DESCRIPTION	CARB. SIZE
		PWM38
2	STARTER VALVE COMP.	1166-834-2200
3	FLOAT COMP.	1052-856-2100
4	FLOAT BOWL COMP.	1050-898-2100
5	GASKET FLOAT BOWL	16163-ND4-7510-M1
6	PLUG SCREW	16162-ND4-7511-M1
7	O-RING PLUG SCREW	16173-001-0040
8	FLOAT VALVE COMP.	1062-814-2101
9	ANCHOR PLATE	16179-KZ4-6900
10	SLOW JET	N424-21XXX
11	JET NEEDLE	N427-48XXX
12	CLIP, JET NEEDLE	16115-169-0040
13	THROTTLE VALVE	N502-31X00
14	CABLE HOLDER	1101-805-2000
15	TOP	1030-872-2000
16	GASKET, TOP	1202-863-6000
17	AIR ADJUST SCREW	W1446-231-9900
18	SPRING	W1711-416-9900
41	WASHER	16085-KG8-9010-M1
42	O-RING	16075-KG8-9010-M1
19	SPRING THROTTLE	1290-920-2000
20	CLIP FLOAT VALVE	0405-019-1000
21	SCREW, FLOAT BOWL	93500-04014-1H
22	BOWL VENT PIPE	95003-07048-31
23	OVERFLOW PIPE	95003-05033-31
24	FLOAT PIN	W9525-25250
25	CLIP	W9535-35000
26	MAIN JET	99101-357-XXX0
27	CABLE ADJUSTER	1036-804-2000
27A	CABLE ADJUSTER	W9581-59250-(25MM)
27B	CABLE ADJUSTER	W9581-59200 (20MM)
28	NUT CABLE ADJUSTER	0208-001-1100
28A	NUT CABLE ADJUSTER	W1793-130-9900
32	BOWL BENT PIPE COMP.	16199-KZ3-6900
33	SCREW	0110-808-1200
46	COLLAR	1118-929-7000